

- ▶II Press to play or pause.按一下來播放或暫停。
- ●● ▶▶ Double-press to skip forward. 按兩下來跳到下一首。
- ●●● ◀◀ Triple-press to skip back. 按三下來跳回上一首。
- Siri Say "Hey Siri" to activate Siri. 說「嘿 Siri」來啟用 Siri。



Spatial Audio in Control Center.

Touch and hold the volume control to turn on Spatial Audio and see status.

「控制中心」中的「空間音訊」。 按住音量控制來開啟「空間音訊」 並查看狀態。



Charge AirPods.

AirPods charge while in the case. Use Lightning connector to charge.

替 AirPods 充電。

AirPods 位於充電盒內時會進行充電。 使用 Lightning 連接器來充電。





© 2022 Apple Inc. All rights reserved. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and are used under license. Designed by Apple in California. Printed in XXXX. TA034-05243-A



To connect to iPhone or iPad with latest software, follow steps 1-2. For all other devices, see fourth panel on this side.

若要連接安裝最新軟體的 iPhone 或 iPad,請按照步驟 1 到 2 操作。 其他裝置請見此面第四頁。






Turn on Bluetooth®.

Connect to Wi-Fi and turn on Bluetooth.

開啟 Bluetooth®。

連接 Wi-Fi 並開啟「藍牙」。

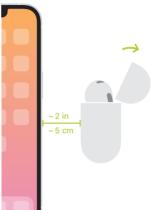



Connect AirPods.

Open case and hold near device to set up. Apple devices signed in to iCloud pair automatically.

連接 AirPods。

打開充電盒並拿近裝置來設定。已登入 iCloud 的 Apple 裝置會自動配對。



Connect to other devices.

With AirPods in open case, press button on back until light blinks. Then choose them in Bluetooth settings.

連接其他裝置。

將 AirPods 裝在打開的充電盒內, 按下盒背按鈕直到指示燈開始閃爍。 然後在「藍牙」設定中選擇耳機。



