

<https://youtu.be/oDXQmpDJJOM>

This video is a step-by-step process on how to fix a Razer keyboard with spamming issues.

A Razer keyboard may spam keys when pressed due to the following reasons:

A faulty switch or other hardware issues

Stuck dirt or debris

A faulty driver or firmware

Insufficient power

Before we begin, remove all other peripherals that are plugged into the computer except for the primary keyboard and mouse.

Let's get started.

First, try the keyboard on a different computer. If it is working properly on a different system, the issue could be due to a defective USB port on your primary device. It is recommended to have it checked by the manufacturer or a reputable technician.

Next, ensure that your Razer device's firmware is up to date. Check out Software and Firmware Updates for Razer Peripherals via the link in the description.

Make sure that Razer Synapse and your computer's OS are up to date.

Check if the keyboard keys are clean and have no dirt, debris, or other residues on or beneath the keycaps. For a guide on how to clean your keyboard, See How to clean your Razer devices that is linked in the description.

Ensure the keyboard is plugged in directly to the computer and not a USB hub, USB extender, or a KVM switch. If already plugged in directly to the computer, try a different USB port.

Make sure your USB port meets the product requirements. Some keyboards need at least USB 3.0.

For keyboards with two USB connectors, ensure that both connectors are plugged in properly to the computer.

For desktop computers, we recommend using USB ports at the back of the system unit.

Disable Synapse 3. Right-click on the Razer Synapse icon found in the system tray then select "Exit Synapse."

Lastly, if the keyboard works with Synapse disabled, do a clean reinstall of Synapse. See How to perform a clean re-installation of Razer Synapse 3 & 2.0 on Windows that is linked in the description.

That's it! You have successfully resolved spamming issue on your Razer keyboard.